
KASO CODELOCK



1 How to open?

Step 1. Press " C " button

Step 2. Press factory code " 1 2 3 4 "

Step 3. Press " # " button

Step 4. Turn knob (Key or Handle) clockwise and open the door while melody rings.

C → **1** **2** **3** **4** → **#**

- 💡 1 : In case that wrong code is tried, it sounds Bi Bi Bi Bi.
- 2 : If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

- **Paralysis Check** : ① No sound but LED flickers when each button pushed.
② **C # #** (LED flickers with Bi sound)

- **How to release the lock from paralysis ?**

Enter the original code twice consecutively as in the opening procedure.

EX) **C 1 2 3 4 #** → **C 1 2 3 4 #** 🎵

- Scramble numbers before and/or after the code can be used for more security.

2 How to close?

1. Home Safe : Close the door, turn knob(or key) counter-clockwise.

3 How to enter 1st code?

Step 1. Press " M " button

Step 2. Press New Code buttons (4 digits min to 16 digits max)

Step 3. Press " # " button (Melodic tone)

 
EX) If a new code is decided 2 1 0 0, press buttons as below. M 2 1 0 0 # (Melodic tone)

M → **1st Code** → **#**

- ⚠ To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.
For example, in case of your code 4 4 0 0, press button C 4 4 0 0 #.
If the procedure is properly done, melody rings for 3 seconds.
-

4 How to enter 2nd code?

- Step 1. Press " M " button
- Step 2. Press " 2 " button
- Step 3. Press " # " button
- Step 4. Press 2nd New Code buttons (4 digits min to 16 digits max)
- Step 5. Press " # " button (Melodic tone)



- ! To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.
For example, in case of your code 4 4 0 0, press button C 4 4 0 0 #.
If the procedure is properly done, melody rings for 3 seconds.

5 How to erase the 2nd code?

- Step 1. Press " M " button
- Step 2. Press " # " button
- Step 3. Press " 2 " button
- Step 4. Press " # " button (Melodic tone)



6 When to replace batteries?

1. If you hear abnormal 'Bi-ric' , not 'Beep' sound when you press any button.
2. Door is not opened in spite of exact code entered.
 - Battery life span : 1 year (In case of three door openings a day)

- ★ Insulated containers are intended to release moisture to protect paper records during a fire. Therefore the door should be opened frequently to permit free circulation of air.
 - ★ Stamps, coins, films, photographs, etc., must be placed in friction lid containers or heavy duty(boil proof) plastic bags and **wrapped in aluminum foil** to prevent moisture damage.
-